



INDEX

A

AAR

See automated alternate routing (AAR)

access, restricting with partitions [5-10](#)

access control

MLPP numbering plan

example (figure) [26-23](#)

explained [26-22](#)

precedence patterns

example (figure) [26-23](#)

explained [26-22](#)

access lists

configuration [13-24](#)

configuration settings (table) [13-27](#)

configuring [13-25](#)

deleting [13-26](#)

finding [13-24](#)

member details configuration settings (table) [13-29](#)

ac user

associating with devices and pilot points [11-26](#)

agent call

barging or monitoring [25-10](#)

alert, call pickup [5-10](#)

alternate party diversion (APD)

example (figure) [26-12](#)

explained [26-11](#)

announcements

blocked precedence [26-21](#)

blocked precedence (figure) [26-21](#)

busy station [26-21](#)

MLPP [26-19](#)

unauthorized precedence [26-20](#)

unauthorized precedence (figure) [26-20](#)

application dial rules

configuring for Web Dialer [14-10](#)

application users

configuring for Web Dialer [14-7](#)

Attendant Console

See Cisco Unified Communications Manager Attendant Console

audio sources

configuring [27-17](#)

creating for MOH [27-9](#)

default MOH sample [27-9](#)

for MOH [27-9](#)

managing for MOH [27-10](#)

multicast [27-10](#)

storing for MOH [27-10](#)

unicast [27-10](#)

auto call pickup

described [5-8](#)

interactions with Cisco Unified Mobility [13-19](#)

automated alternate routing (AAR)

MLPP interaction [26-29](#)

B

bandwidth

insufficient with AAR for MLPP [26-29](#)

barge

activating with built-in conference bridge [1-10](#)

built-in and shared conference bridge differences (table) [1-2](#)

configuration checklist (table) [1-11](#)

configuring [1-11](#)

described [1-2](#)

- installing and activating [1-10](#)
 - interactions and restrictions [1-7](#)
 - intercom usage [22-4](#)
 - overview [1-1](#)
 - related topics [1-14](#)
 - service parameters [1-13](#)
 - softkey [1-4](#)
 - system requirements [1-6](#)
- BIB call information and call display [25-23](#)
- BLF
- configuring for directed call park [4-22](#)
 - directed call park configuration settings [4-23](#)
- BLF/SpeedDial
- buttons [28-20](#)
 - configuration settings (table) [4-23, 28-21](#)
 - configuring [28-19](#)
- built-in bridge
- See* BIB
- built-in conference bridge, barge [1-10](#)
- busy lamp field call pickup
- configuration checklist (table) [5-20](#)
 - described [5-7](#)
 - example [5-8](#)
-
- C
- Call Back
- additional information for Call Back notification with phones that are running SIP [2-6](#)
 - configuration checklist [2-7](#)
 - description [2-1](#)
 - interactions and restrictions [2-5](#)
 - interactions with Call Forward, iDivert, and Voice-Mail System features [2-6](#)
 - overview [2-1](#)
 - setting service parameters [2-10](#)
 - softkey template [2-8](#)
 - suspend/resume functionality [2-4](#)
 - system requirements [2-5](#)
 - understanding [2-2](#)
- call classification configuration settings (table) [19-8](#)
- call display restrictions
- configuration checklist (table) [3-6](#)
 - configuring [3-5](#)
 - configuring phones for [3-8](#)
 - enabling [3-2](#)
 - interactions
 - call park [3-4](#)
 - conference [3-5](#)
 - conference list [3-5](#)
 - extension mobility [3-5](#)
 - listed [3-4](#)
 - voice mail [3-5](#)
 - introduction [3-1](#)
 - overview [3-1, 3-2](#)
 - related topics [3-13](#)
 - sample call flow (figure) [3-12](#)
 - sample configurations
 - calling search spaces [3-9](#)
 - call park [3-12](#)
 - devices [3-10](#)
 - gateways [3-10](#)
 - listed [3-8](#)
 - translation patterns [3-10](#)
 - scenarios [3-3](#)
 - service parameter for connected number display [3-13](#)
 - system requirements [3-3](#)
 - translation patterns for [3-6](#)
 - with Cisco Extension Mobility [8-10](#)
- called digits transformation (figure) [23-10](#)
- called party
- transformations
 - and local route groups [23-9](#)
- call forward
- MLPP interaction [26-27](#)
- calling party normalization
- activating [7-11](#)
 - BAT support [7-9](#)

- Call Detail Record support [7-9](#)
- calling party number type [7-13](#)
- calling party transformation CSS [7-20](#)
- CAR support [7-9](#)
- Cisco Extension Mobility support [7-9](#)
- configuration checklist [7-11](#)
- configuring [7-11](#)
- device mobility support [7-9](#)
- forwarding calls [7-8](#)
- globalizing described [7-2](#)
- information for end users [7-22](#)
- installing [7-11](#)
- interactions [7-8](#)
- localizing, described [7-4](#)
- mapping global number to local variant [7-6](#)
- phone support [7-7](#)
- prefixes [7-16](#)
- related topics [7-22](#)
- restrictions [7-10](#)
- service parameters [7-13](#)
- system requirements [7-7](#)
- transferring calls [7-8](#)
- calling party transformation patterns [7-4](#)
- calling search spaces
 - Cisco Unified Communications Manager Assistant
 - configuration tips [9-20](#)
 - SUBSCRIBE (for Presence) [28-9, 28-13](#)
- call monitoring
 - See* monitoring
- call park
 - Cisco Unified Communications Manager Attendant Console usage [11-15](#)
 - configuration checklist (table) [4-8](#)
 - configuration settings (table) [4-12](#)
 - configuring [4-8](#)
 - configuring a number [4-11, 4-21](#)
 - deleting a number [4-12](#)
 - directed
 - via DTMF with Cisco Unified Mobility [13-13](#)
 - example with MOH [27-5](#)
 - finding a number [4-10](#)
 - installing and activating [4-8](#)
 - interactions [4-5](#)
 - interaction with call display restrictions [3-4](#)
 - introduction [4-2](#)
 - overview [4-1](#)
 - restrictions [4-7](#)
 - setting service parameters [4-9](#)
 - system requirements [4-4](#)
 - usage example [4-2](#)
- call pickup
 - activating [5-13](#)
 - auto
 - described [5-8](#)
 - interactions with Cisco Unified Mobility [13-19](#)
 - busy [5-9](#)
 - busy lamp field
 - configuration checklist (table) [5-20](#)
 - described [5-7](#)
 - call pickup group
 - assigning to a directory number [5-27](#)
 - defining a pickup group for other group pickup [5-27](#)
 - configuration checklist (table) [5-14](#)
 - configuring [5-14](#)
 - directed
 - configuration checklist (table) [5-18](#)
 - described [5-3](#)
 - examples [5-4](#)
 - group call pickup
 - described [5-2](#)
 - installing [5-13](#)
 - interactions
 - call accounting [5-12](#)
 - calling search space [5-12](#)
 - dependency records [5-12](#)
 - listed [5-11](#)
 - partitions [5-12](#)

- route plan report [5-12](#)
 - time of day [5-12](#)
 - interactions and restrictions [5-11](#)
 - introducing [5-1](#)
 - no answer [5-9](#)
 - no bandwidth [5-9](#)
 - notification [5-10](#)
 - other group
 - configuration checklist (table) [5-16](#)
 - described [5-3](#)
 - overview [5-1](#)
 - phone feature described [5-2](#)
 - related topics [5-28](#)
 - restricting access [5-10](#)
 - restrictions
 - listed [5-13](#)
 - service parameters [5-21](#)
 - system requirements [5-11](#)
 - using with partitions [5-10](#)
- call pickup group
- configuration settings (table) [5-23](#)
 - configuring [5-22](#), [5-23](#)
 - deleting [5-26](#)
 - finding [5-22](#)
- call preservation
- with intercom [22-5](#)
 - with MLPP [26-29](#)
- call queuing [11-10](#)
- call recording
- See* recording
- call throttling
- introduction [6-1](#)
 - related topics [6-3](#)
 - troubleshooting [6-2](#)
- call transfer
- MLPP interaction [26-28](#)
- call waiting
- MLPP interaction [26-28](#)
- cBarge
- activating with shared conference bridge [1-10](#)
 - softkey [1-5](#)
- CDR
- recording for precedence calls [26-27](#)
- CEF
- See* Cisco Extended Functions
- channel nonpreemptable [26-14](#)
- Cisco CallManager Attendant Console Server service
- service parameters [11-35](#)
 - understanding [11-11](#)
- Cisco Customer Response Platform
- components [12-3](#)
- Cisco Extended Functions
- activating for QRT [29-22](#)
 - DB Change Notifier [29-5](#)
 - DBL library [29-4](#)
 - multiple applications in a cluster [29-6](#)
 - QBEHelper [29-4](#)
 - redundancy manager [29-4](#)
 - screen helper and dictionary [29-4](#)
 - SDI Trace and Alarm [29-5](#)
 - service architecture [29-3](#)
 - service architecture (figure) [29-4](#)
 - service dependency [29-5](#)
 - service dependency (figure) [29-6](#)
 - service parameters for QRT [29-24](#)
- Cisco Extension Mobility
- adding the Cisco Extension Mobility service [8-17](#)
 - configuration checklist (table) [8-14](#)
 - configuration example [8-13](#)
 - configuration guidelines [8-12](#)
 - configuring [8-12](#)
 - creating a default device profile for each Cisco Unified IP Phone type [8-22](#)
 - creating the device profile for a user [8-25](#)
 - description [8-2](#)
 - device profiles
 - default [8-2](#)

- understanding [8-2](#)
 - user [8-2](#)
 - equivalency [8-7](#)
 - illustrated (figure) [8-3](#)
 - information for users [8-29](#)
 - installing [8-12](#)
 - interactions
 - bulk administration tool [8-9](#)
 - call display restrictions [8-10](#)
 - Cisco Unified Communications Manager Assistant [8-10](#)
 - Cisco Unified Communications Manager Attendant Console [8-10](#)
 - intercom [8-10](#)
 - listed [8-9](#)
 - Presence [28-9](#)
 - services that are running on the same server [8-9](#)
 - interactions and restrictions [8-9](#)
 - intercom interactions [22-5](#)
 - introducing [8-1](#)
 - login and logout behavior [8-4](#)
 - login call flow [8-5](#)
 - logout call flow [8-6](#)
 - overview [8-1](#)
 - related topics [8-30](#)
 - restrictions [8-11](#)
 - setting service parameters (table) [8-18](#)
 - SIP support [8-4](#)
 - subscribing phones [8-28](#)
 - system requirements [8-8](#)
 - user device profile, associating [8-27](#)
 - using [8-29](#)
- Cisco IPMA
- See* Cisco Unified Communications Manager Assistant
- Cisco IP Manager Assistant service
- understanding [9-3, 10-3](#)
- Cisco Unified Communications Manager
- MOH servers [27-7](#)
 - Cisco Unified Communications Manager Assistant
 - architecture overview [9-2, 10-2](#)
 - assistant console dialog options [9-41, 10-29](#)
 - assistant console interface [9-4, 10-4](#)
 - assistant interfaces [9-6, 10-5](#)
 - bulk administration tool [9-8, 10-7](#)
 - calling search space and partitions, configuration tips [9-20](#)
 - Cisco Unified IP Phone interface [9-5, 10-5](#)
 - Cisco Unified IP Phone Services, configuration tips [9-27](#)
 - configuration checklist for proxy line support (table) [9-13](#)
 - configuration checklist with shared line support (table) [10-12](#)
 - configuration wizard for proxy line [9-17](#)
 - configuring assistant phones, tips [9-29](#)
 - configuring assistant proxy and incoming intercom lines [9-35](#)
 - configuring manager and assigning assistant for proxy line [9-32](#)
 - configuring manager and assigning assistant for shared line [10-21](#)
 - configuring manager phones, tips [9-28](#)
 - configuring manager primary and incoming intercom lines [9-32, 10-21](#)
 - configuring shared and incoming intercom lines for assistant [10-24](#)
 - database access architecture, understanding [9-5, 10-5](#)
 - deleting assistant information [9-37, 10-25](#)
 - deleting manager information [9-34, 10-23](#)
 - dial rules configuration [9-39, 10-27](#)
 - extension mobility [9-8, 10-8](#)
 - installing and activating [9-11, 10-11](#)
 - installing the assistant console application [9-39, 10-27](#)
 - interactions [9-7](#)
 - intercom [9-10, 10-9](#)
 - intercom usage [22-5](#)
 - IPMASecureSysUser [9-26, 10-18](#)
 - manager and assistant configuration [10-20](#)
 - manager and assistant phone configuration [9-27, 10-18](#)

- manager assistant administration interface [9-6, 10-6](#)
 - manager configuration [9-41, 10-29](#)
 - manager interfaces [9-5, 10-5](#)
 - message waiting indicator [9-10](#)
 - more information [10-30](#)
 - multilevel precedence and preemption [9-10](#)
 - Multilevel Precedence and Preemption (MLPP) [10-9](#)
 - phones, configuration tips [9-31, 10-20](#)
 - providing information to managers and assistants [9-39, 10-27](#)
 - reporting tools [9-8, 10-8](#)
 - restrictions [9-7, 9-11, 10-10](#)
 - route point configuration tips [9-21](#)
 - scalability [9-25, 10-16](#)
 - security [9-26, 10-18](#)
 - setting service parameters [9-22, 10-15](#)
 - softkeys [9-6, 10-6](#)
 - starting the Cisco IP Manager Assistant service [9-27, 10-18](#)
 - system configuration with proxy line [9-17](#)
 - system requirements for proxy line support [9-7](#)
 - system requirements for shared line support [10-6](#)
 - time-of-day routing [9-10](#)
 - updating assistant information [9-38, 10-26](#)
 - updating manager information [9-34, 10-23](#)
 - with proxy line support [9-1](#)
 - with shared line support [10-1](#)
- Cisco Unified Communications Manager Attendant Console
- associating devices and pilot points with ac user [11-26](#)
 - call park usage [11-15](#)
 - client configuration settings (table) [11-41](#)
 - configuration checklist (table) [11-19](#)
 - configuring [11-18](#)
 - configuring attendant settings [11-40](#)
 - configuring held icon timers [11-42](#)
 - CorporateDirectory.txt file
 - creating and uploading [11-36](#)
 - deleting [11-37](#)
 - CTI usage [11-16](#)
 - dependency records [11-43](#)
 - directed call park usage [11-15](#)
 - directory [11-10](#)
 - extension mobility usage [11-15](#)
 - firewall support [11-13](#)
 - hunt groups
 - configuration settings (table) [11-33](#)
 - deleting members [11-34](#)
 - understanding [11-3](#)
 - installing [11-38](#)
 - installing and activating [11-18](#)
 - interactions [11-15](#)
 - IP phone requirements [11-14](#)
 - music on hold usage [11-15](#)
 - overview [11-1](#)
 - PC requirements [11-13](#)
 - pilot points
 - configuration settings (table) [11-29](#)
 - configuring [11-28](#)
 - deleting [11-30](#)
 - finding [11-27](#)
 - resetting [11-31](#)
 - understanding [11-3](#)
 - redundancy [11-12](#)
 - related topics [11-43](#)
 - restrictions [11-16](#)
 - starting after installing Windows XP SP2 [11-39](#)
 - system requirements [11-13](#)
 - users
 - configuration settings (table) [11-23](#)
 - configuring [11-21, 11-22](#)
 - deleting [11-23](#)
 - finding [11-21](#)
 - understanding [11-2](#)
 - voice-messaging requirements [11-14](#)
- Cisco Unified Communications Manager Auto-Attendant
- Cisco Unified Communications Manager and the CRS engine [12-4](#)

- components [12-3](#)
- configuration checklist (table) [12-4](#)
- description [12-1](#)
- installing [12-4](#)
- managing [12-6](#)
- overview [12-2](#)
- understanding [12-2](#)
- Cisco Unified IP Phones
 - subscribing to Cisco Extension Mobility [8-28](#)
- Cisco Unified IP Phone Services
 - Cisco Unified Communications Manager Assistant
 - configuration tips [9-27](#)
- Cisco Unified Mobile Communicator
 - and Cisco Unified Mobility
 - configuration checklist (table) [13-7](#)
 - configuration details [13-8](#)
 - described [13-6](#)
- Cisco Unified Mobility
 - access list configuration [13-24](#)
 - access list configuration settings (table) [13-27](#)
 - access list member detail configuration settings (table) [13-29](#)
 - associating a DN with a remote destination profile [13-31](#)
 - benefits [13-4](#)
 - Cisco Unified Mobile Communicator
 - configuration checklist (table) [13-7](#)
 - configuration details [13-8](#)
 - described [13-6](#)
 - configuration checklist (table) [13-23](#)
 - configuring [13-22](#)
 - configuring access lists [13-25](#)
 - configuring dual-mode handoff settings [13-48](#)
 - configuring media resources [13-40](#)
 - configuring remote destination profiles [13-31](#)
 - configuring remote destinations [13-36](#)
 - configuring softkeys [13-48](#)
 - definitions (table) [13-2](#)
 - deleting access lists [13-26](#)
 - deleting remote destination profiles [13-31](#)
 - deleting remote destinations [13-37](#)
 - described [13-1](#)
 - dial-via-office reverse callback [13-9](#)
 - directed call park via DTMF [13-13](#)
 - feature benefits [13-4](#)
 - finding access lists [13-24](#)
 - finding remote destination profiles [13-29](#)
 - finding remote destinations [13-35](#)
 - interactions
 - auto call pickup [13-19](#)
 - licensing [13-19](#)
 - listed [13-18](#)
 - number of supported calls [13-19](#)
 - interactions and restrictions [13-18](#)
 - introducing [13-2](#)
 - list of features [13-3](#)
 - migrating from Cisco Unified MobilityManager [13-22](#)
 - mobile connect [13-5](#)
 - mobile voice access [13-5](#)
 - mobile voice access configuration by service parameter [13-47](#)
 - mobile voice access configuration settings (table) [13-41](#)
 - mobility configuration
 - procedure [13-48](#)
 - settings (table) [13-48](#)
 - related topics [13-49](#)
 - remote destination configuration settings (table) [13-38](#)
 - remote destination profile
 - configuring [13-29](#)
 - remote destination profile configuration settings (table) [13-32](#)
 - remote destinations
 - configuring [13-35](#)
 - restrictions
 - listed [13-20](#)
 - SIP URI dialing [13-14](#)

- system requirements [13-21](#)
 - time-of-day access
 - configuration checklist (table) [13-11](#)
 - described [13-10](#)
 - important notes [13-12](#)
 - use case scenarios
 - dial-via-office reverse callback [13-16](#)
 - directed call park via DTMF [13-17](#)
 - listed [13-15](#)
 - mobile connect [13-15](#)
 - mobile voice access [13-16](#)
 - time-of-day access [13-16](#)
 - Cisco Unified MobilityManager
 - migrating to Cisco Unified Mobility [13-22](#)
 - Cisco Web Dialer
 - See* Web Dialer
 - client matter codes
 - BAT usage [15-4](#)
 - CAR usage [15-4](#)
 - configuration checklist (table) [15-5](#)
 - configuration settings (table) [15-8](#)
 - configuring [15-7](#)
 - CTI, JTAPI, and TAPI usage [15-4](#)
 - deleting [15-8](#)
 - described [15-2](#)
 - enabling for route patterns [15-9](#)
 - finding [15-6](#)
 - installation [15-5](#)
 - interactions [15-3](#)
 - requirements [15-5](#)
 - restrictions [15-3](#)
 - system requirements [15-5](#)
 - user information [15-13](#)
 - codecs
 - for monitoring and recording calls (figure) [25-21](#)
 - code yellow state [6-1](#)
 - common network facility preemption
 - example (figure) [26-16](#)
 - example with retry timer Trr (figure) [26-17](#)
 - explained [26-15](#)
 - conference list
 - interaction with call display restrictions [3-5](#)
 - CorporateDirectory.txt file
 - creating and uploading [11-36](#)
 - deleting [11-37](#)
 - CTI
 - Cisco Unified Communications Manager Attendant Console usage [11-16](#)
 - event delivery for monitoring and recording (figure) [25-24](#)
 - intercom interactions [22-5](#)
 - requirements for monitoring and recording [25-24](#)
 - securing TLS connection [29-7](#)
 - CTI route points
 - Cisco Unified Communications Manager Assistant configuration tips [9-21](#)
 - Customer Response Solutions, installing [12-4](#)
 - custom phone rings
 - creating [16-3](#)
 - customizing files [16-2](#)
 - introduction [16-1](#)
 - overview [16-1](#)
 - PCM file requirements [16-3](#)
-
- D
 - database scalability [27-7](#)
 - default device profiles
 - creating for each Cisco Unified IP Phone type [8-22](#)
 - dependency records
 - Cisco Unified Communications Manager Attendant Console [11-43](#)
 - device mobility
 - configuration checklist [17-10](#)
 - configuration tips [17-9](#)
 - configuring [17-7](#)
 - enabling/disabling [17-11](#)
 - feature interactions [17-5](#)
 - feature restrictions [17-5](#)

- installing [17-6](#)
- introducing [17-1](#)
- more information [17-12](#)
- network considerations [17-9](#)
- operations [17-2](#)
- overview [17-1](#)
- supported phone models [17-6](#)
- system requirements [17-6](#)
- troubleshooting [17-12](#)
- viewing roaming parameters [17-12](#)
- device profiles
 - and Cisco Extension Mobility [8-2](#)
 - creating for a Cisco Extension Mobility user [8-25](#)
 - default for Cisco Extension Mobility [8-2](#)
 - for a Cisco Extension Mobility user [8-27](#)
 - user for Cisco Extension Mobility [8-2](#)
- dial-via-office reverse callback
 - with Cisco Unified Mobility [13-9](#)
- directed call park
 - BLF configuration settings [4-23](#)
 - Cisco Unified Communications Manager Attendant Console usage [11-15](#)
 - configuration checklist (table) [4-18](#)
 - configuration settings (table) [4-22](#)
 - configuring BLF/Directed Call Park buttons [4-22](#)
 - deleting a number [4-24](#)
 - finding a number [4-20](#)
 - installing and activating [4-17](#)
 - interactions [4-15](#)
 - introduction [4-13](#)
 - overview [4-1](#)
 - restrictions [4-17](#)
 - setting service parameters [4-20](#)
 - system requirements [4-14](#)
 - usage example [4-14](#)
 - via DTMF
 - with Cisco Unified Mobility [13-13](#)
- directed call pickup
 - basic completion (figure) [5-4](#)
 - basic setup (figure) [5-4](#)
 - configuration checklist (table) [5-18](#)
 - described [5-3, 5-4](#)
 - multiple-calls completion (figure) [5-7](#)
 - multiple-calls setup (figure) [5-7](#)
 - rejection (figure) [5-5, 5-6](#)
- directory
 - Cisco Unified Communications Manager Attendant Console, understanding [11-10](#)
- directory number
 - assigning a call pickup group [5-27](#)
- DND
 - activating [18-6](#)
 - adding to common phone profiles [18-8](#)
 - architecture overview [18-2](#)
 - configuration checklist (table) [18-6](#)
 - configuring [18-6](#)
 - described [18-1](#)
 - device parameters (table) [18-7](#)
 - feature key [18-7](#)
 - hardware requirements [18-3](#)
 - high priority call with DND ringer off enabled on a shared line (figure) [18-13](#)
 - incoming call alert settings [18-2](#)
 - installing [18-6](#)
 - interactions
 - callback [18-4](#)
 - extension mobility [18-5](#)
 - hold reversion and intercom [18-4](#)
 - hunt list [18-4](#)
 - listed [18-3](#)
 - MLPP and CER [18-4](#)
 - park reversion [18-3](#)
 - pickup [18-4](#)
 - pickup notification [18-4](#)
 - intercom usage [22-4](#)
 - introducing [18-1](#)
 - normal priority call with DND ringer off enabled on a nonshared line (figure) [18-11](#)

normal priority call with DND ringer off enabled on a shared line (figure) [18-12](#)

related topics [18-16](#)

restrictions [18-5](#)

service parameters [18-6](#)

softkeys [18-7](#)

software requirements [18-3](#)

status notification for SCCP [18-2](#)

status notification for SIP devices [18-2](#)

system requirements [18-3](#)

troubleshooting [18-14](#)

troubleshooting errors (table) [18-15](#)

usage examples [18-10](#)

using [18-9, 18-10](#)

domains, MLPP

- identifier for MLPP [26-7](#)

do not disturb

- See* DND

DSCP

- mapping to call precedence [26-30](#)

dual-mode phones

- configuring handoff settings [13-48](#)

E

end users

- adding to standard end users group for Web Dialer [14-10](#)

enterprise parameters

- MLPP [26-38](#)
- Presence [28-13](#)

extension mobility

- Cisco Unified Communications Manager Attendant Console usage [11-15](#)
- interaction with call display restrictions [3-5](#)

external call transfer restrictions

- activating [19-5](#)
- blocking external call from transferring to external party (figure) [19-4](#)
- block offnet to offnet transfer service parameter [19-7](#)

- call classification configuration settings (table) [19-8](#)
- call classification service parameter [19-7](#)
- configuration checklist (table) [19-6](#)
- configuring [19-5](#)
- gateway configuration [19-7](#)
- installing [19-5](#)
- interactions [19-4](#)
- introducing [19-1](#)
- overview [19-1](#)
- related topics [19-9](#)
- restrictions [19-4, 19-5](#)
- route pattern configuration [19-8](#)
- service parameters [19-6](#)
- system requirements [19-4](#)
- transferring external calls to an external party (figure) [19-3](#)
- trunk configuration [19-8](#)

F

features

- barge [1-1](#)
- call display restrictions [3-1](#)
- call park [4-1](#)
- Cisco Extension Mobility
 - bulk administration tool [8-9](#)
- Cisco Unified Communications Manager Assistant
 - assistant console interface [9-4, 10-4](#)
 - assistant interfaces [9-6, 10-5](#)
 - bulk administration tool [9-8, 10-7](#)
 - calling search space and partitions [9-20](#)
 - Cisco Unified IP Phone interface [9-5, 10-5](#)
 - Cisco Unified IP Phone Services [9-27](#)
 - configuration checklist for proxy line support (table) [9-13](#)
 - extension mobility [9-8, 10-8](#)
 - intercom [9-10, 10-9](#)
 - manager assistant administration interface [9-6, 10-6](#)

- manager interfaces 9-5, 10-5
- message waiting indicator 9-10
- multilevel precedence and preemption 9-10
- Multilevel Precedence and Preemption (MLLP) 10-9
- phones 9-31, 10-20
- reporting tools 9-8, 10-8
- route point 9-21
- softkeys 9-6, 10-6
- time-of-day routing 9-10
- understanding architecture 9-2, 10-2
- understanding database access architecture 9-5
- understanding database and directory access architecture 10-5
- device mobility 17-1
- directed call park 4-1
- external call transfer restrictions 19-1
- hold reversion 20-1
- immediate divert 21-1
- malicious call ID (MCID) 24-1
- Multilevel Precedence and Preemption (MLPP)
 - using with Cisco Unified Communications Manager Assistant 10-9
- Presence 28-1
- privacy 1-1
- QRT 29-1, 29-15
- Web Dialer 14-1
- feature safe
 - for Cisco Extension Mobility 8-7
- file format, Ringlist.xml 16-2
- firewalls and one-way media (figure) 25-23
- fixed audio source
 - configuration settings (table) 27-23
 - configuring 27-22, 27-23
 - deleting 27-23
- forced authorization codes
 - BAT usage 15-4
 - CAR usage 15-4
 - configuration checklist (table) 15-5
 - configuration settings (table) 15-11

- configuring 15-11
- CTI, JTAPI, and TAPI usage 15-4
- deleting 15-12
- described 15-2
- enabling for route patterns 15-13
- finding 15-10
- installation 15-5
- interactions 15-3
- requirements 15-5
- restrictions 15-3
- system requirements 15-5
- user information 15-13
- forwarding
 - local route groups 23-12

G

- globalizing calling party number
 - activating 7-11
 - BAT support 7-9
 - Call Detail Record support 7-9
 - calling party number type 7-13
 - CAR support 7-9
 - Cisco Extension Mobility support 7-9
 - configuration checklist 7-11
 - configuring 7-11
 - described 7-2
 - device mobility support 7-9
 - example 7-2
 - forwarding 7-8
 - gateway support 7-3
 - information for end users 7-22
 - installing 7-11
 - interactions 7-8
 - mapping global number to local variant 7-6
 - phone support 7-7
 - prefixes 7-16
 - related topics 7-22
 - restrictions 7-10

service parameters 7-13
 system requirements 7-7
 transferring 7-8

group call pickup

configuration checklist (table) 5-14
 described 5-2

H

H.323 gateway

configuring for mobile voice access
 options 13-42
 using hairpinning 13-45
 using PRI 13-43

held icon timers, configuring 11-42

hold reversion

alerting operations (table) 20-3
 call focus operations 20-3
 call focus priority 20-9
 configuration checklist (table) 20-10
 configuration tips 20-10
 configuring 20-9
 configuring call focus priority 20-11
 configuring call reversion timer settings 20-12
 description 20-2
 examples 20-2, 20-4
 installing 20-9
 interactions
 call park 20-7
 CTI applications 20-8
 listed 20-7
 MLPP 20-7
 music on hold 20-7
 introducing 20-1
 more information 20-14
 overview 20-1
 providing information to users 20-13
 restrictions 20-8
 retrieving reverted calls 20-4

supported devices 20-6
 supported phone models 20-6
 system requirements 20-6
 timer deactivation 20-4
 timers 20-9
 troubleshooting 20-14

hunt groups

broadcast, understanding 11-9
 circular, understanding 11-7
 configuration settings (table) 11-33
 configuring members 11-32
 deleting members 11-34
 linked, understanding 11-5
 understanding 11-3

immediate divert

call-processing requirements 21-2
 configuration checklist (table) 21-9
 configuring 21-9
 installing and activating 21-9
 interactions
 call detail records 21-7
 call forward 21-7
 conference 21-7
 hunt list 21-7
 listed 21-6
 MLPP 21-6
 interactions and restrictions 21-6
 introducing 21-1
 overview 21-1
 phone display messages 21-4
 related topics 21-11
 requirements for incoming calls 21-3
 requirements for outgoing calls 21-3
 restrictions 21-7
 scenarios 21-4, 21-5
 setting service parameters 21-10

- softkey requirements [21-2](#)
 - system requirements [21-2](#)
 - using [21-4](#)
 - indication enabled [26-10](#)
 - insufficient bandwidth, AAR for MLPP [26-29](#)
 - intercom
 - barge usage [22-4](#)
 - BAT usage [22-22](#)
 - call preservation [22-5](#)
 - Cisco Extension Mobility interactions [22-5](#)
 - Cisco Unified Communications Manager Assistant [9-10](#)
 - Cisco Unified Communications Manager Assistant usage [22-5](#)
 - configuration checklist (table) [22-7](#)
 - configuring [22-6](#)
 - CTI interactions [22-5](#)
 - described [22-1](#)
 - DND usage [22-4](#)
 - installing and activating [22-6](#)
 - interactions [22-4](#)
 - IP phones supported [22-3](#)
 - overview [22-1](#)
 - restrictions [22-4](#)
 - SRST usage [22-5](#)
 - system requirements [22-2](#)
 - troubleshooting [22-23](#)
 - using [22-7](#)
 - with Cisco Extension Mobility [8-10](#)
 - IPMA, Cisco
 - See* Cisco Unified Communications Manager Assistant
-
- L
- licensing
 - interactions with Cisco Unified Mobility [13-19](#)
 - lines, interaction with MLPP [26-27](#)
 - localizing calling party number
 - activating [7-11](#)
 - BAT support [7-9](#)
 - Call Detail Record support [7-9](#)
 - calling party transformation CSS [7-20](#)
 - calling party transformations patterns [7-4](#)
 - CAR support [7-9](#)
 - Cisco Extension Mobility support [7-9](#)
 - configuration checklist [7-11](#)
 - configuring [7-11](#)
 - described [7-4](#)
 - device mobility support [7-9](#)
 - example [7-5](#)
 - forwarding [7-8](#)
 - information for end users [7-22](#)
 - installing [7-11](#)
 - interactions [7-8](#)
 - mapping global number to local variant [7-6](#)
 - phone support [7-7](#)
 - related topics [7-22](#)
 - restrictions [7-10](#)
 - system requirements [7-7](#)
 - transferring [7-8](#)
 - local offnet access
 - managing in a centralized mode (figure) [23-4](#)
 - local route groups
 - and called party transformations [23-9](#)
 - and forwarding [23-12](#)
 - and route plan report [23-12](#)
 - and supplementary services [23-12](#)
 - binding a provisioned route group [23-3](#)
 - called digits transformation (figure) [23-10](#)
 - described [23-2](#)
 - installing and activating [23-13](#)
 - interactions [23-11](#)
 - interactions and restrictions [23-11](#)
 - introduction [23-1](#)
 - mixed route list restrictions [23-13](#)
 - provisioning local offnet access with (figure) [23-6](#)

- provisioning local offnet access without (figure) [23-5](#)
- provisioning TEHO with (figure) [23-9](#)
- provisioning TEHO without (figure) [23-8](#)
- restrictions [23-13](#)
- routing with [23-3](#)
- simple local routing [23-4](#)
- supported devices [23-11](#)
- system requirements [23-11](#)
- with TEHO [23-7](#)

login call flow

- Cisco Extension Mobility [8-5](#)

logout call flow

- Cisco Extension Mobility [8-6](#)

M

malicious call ID

- adding a softkey template [24-6](#)
- configuration checklist (table) [24-5](#)
- configuring alarms [24-6](#)
- explained [24-1](#)
- feature code [24-2](#)
- giving MCID to users [24-7](#)
- installing [24-4](#)
- interactions
 - alarms [24-3](#)
 - call detail records [24-3](#)
 - conference calls [24-3](#)
 - extension mobility [24-3](#)
 - listed [24-3](#)
- overview [24-1](#)
- related topics [24-8](#)
- removing MCID feature [24-8](#)
- restrictions [24-4](#)
- services [24-1](#)
- setting service parameters [24-5](#)
- system requirements [24-2](#)
- troubleshooting [24-8](#)
- using [24-2](#)

malicious call identification (MCID)

See malicious call ID

MGCP

and MLPP [26-29](#)

MLPP

- activating [26-36](#)
- announcements
 - blocked precedence [26-21](#)
 - blocked precedence (figure) [26-21](#)
 - busy station [26-21](#)
 - explained [26-19](#)
 - unauthorized precedence [26-20](#)
 - unauthorized precedence (figure) [26-20](#)
- automated alternate routing (AAR) [26-29](#)
- call forward [26-27](#)
- call preservation [26-29](#)
- call transfer [26-28](#)
- call waiting [26-28](#)
- CDR recording [26-27](#)
- configuration checklist (table) [26-37](#)
- described [26-1](#)
- domain [26-7](#)
- enterprise parameters [26-38](#)
- hierarchical configuration [26-26](#)
- indication [26-10](#)
- installing [26-36](#)
- interactions [26-34](#)
- introducing [26-1](#)
- line feature interaction [26-27](#)
- mapping to DSCP [26-30](#)
- MGCP [26-29](#)
- numbering plan
 - example (figure) [26-23](#)
 - explained [26-22](#)
- precedence
 - alternate party diversion (APD) [26-11](#)
 - alternate party diversion example (figure) [26-12](#)
 - call setup [26-10](#)
 - explained [26-3](#)

- patterns [26-9](#)
- precedence patterns
 - example (figure) [26-23](#)
 - explained [26-22](#)
- preemption
 - common network facility [26-15](#)
 - common network facility example (figure) [26-16](#)
 - common network facility example with retry timer Trr (figure) [26-17](#)
 - details [26-13](#)
 - enabled [26-12](#), [26-13](#)
 - explained [26-6](#)
 - receiving [26-12](#)
 - user access [26-13](#)
 - user access channel nonpreemptable [26-14](#)
 - user access example (figure) [26-14](#)
- PRI [26-29](#)
- restrictions [26-34](#), [26-35](#)
- service parameter [26-27](#)
- shared lines [26-28](#)
- supplementary services
 - call forwarding [26-31](#)
 - call pickup [26-33](#)
 - call transfer [26-32](#)
 - hunt pilots and hunt lists [26-33](#)
 - multiple appearance lines [26-30](#)
 - overview [26-30](#)
 - three-way calling [26-32](#)
- terminology [26-2](#)
- trunk selection
 - example (figure) [26-25](#)
 - explained [26-24](#)
- mobile connect
 - and MLPP [13-18](#)
 - feature interactions [13-18](#)
 - overview [13-2](#)
 - related topics [13-49](#)
 - restrictions [13-18](#)
- mobile voice access
 - configuration settings (table) [13-41](#)
 - configuring by service parameter [13-47](#)
 - H.323 configuration
 - options [13-42](#)
 - using hairpinning [13-45](#)
 - using PRI [13-43](#)
 - media resources [13-40](#)
 - overview [13-2](#)
 - related topics [13-49](#)
- mobility softkeys
 - configuring [13-48](#)
- modifying files [16-2](#)
- MOH
 - See* music on hold (MOH)
- monitoring
 - adding user for application (figure) [25-28](#)
 - adding user to groups (figure) [25-29](#)
 - agent call [25-10](#)
 - agent cannot control a monitoring call (figure) [25-8](#)
 - agent conferences in the supervisor (figure) [25-11](#)
 - agent in a conference (figure) [25-11](#)
 - architecture (figure) [25-4](#)
 - BIB [25-23](#)
 - call characteristics [25-20](#)
 - call information [25-23](#)
 - call preservation [25-23](#)
 - codec for calls (figure) [25-21](#)
 - configuration checklist (table) [25-37](#)
 - configuring [25-27](#)
 - configuring calling search spaces (figure) [25-31](#)
 - configuring tones (figure) [25-30](#)
 - CTI event delivery (figure) [25-24](#)
 - CTI requirements [25-24](#)
 - described [25-1](#)
 - firewalls (figure) [25-23](#)
 - hardware requirements [25-25](#)
 - interactions listed [25-25](#)

- interactions with CTI and JTAPI/TSP applications [25-25](#)
- interactions with other features [25-26](#)
- introducing [25-1, 25-6](#)
- invocation of a session [25-6](#)
- multiple sessions (figure) [25-9](#)
- notification tones [25-20](#)
- one-way media [25-22](#)
- one-way media (figure) [25-23](#)
- overview (figure) [25-2](#)
- play tone behavior [25-21](#)
- related topics [25-38](#)
- restrictions
 - listed [25-26](#)
 - security [25-26](#)
 - with intercom [25-26](#)
- service parameters [25-38](#)
- session (figure) [25-7](#)
- session flow (figure) [25-6](#)
- simultaneous with recording (figure) [25-19](#)
- streaming through the agent IP phone (figure) [25-5](#)
- supervisor conferences in another supervisor (figure) [25-12](#)
- supervisor transfers the monitoring call (figure) [25-7](#)
- supported devices [25-5](#)
- system requirements [25-24](#)
- terminology [25-2](#)
- turn on IP phone BIB to allow (figure) [25-27](#)
- multicast
 - audio sources for MOH [27-10](#)
 - configuration checklist (table) [27-12](#)
 - explained [27-10](#)
- multilevel precedence and preemption
 - See* MLPP
- music on hold (MOH)
 - audio files
 - deleting [27-32](#)
 - displaying [27-30](#)
 - managing [27-30](#)
 - uploading [27-31](#)
- audio sources
 - configuration settings (table) [27-20](#)
 - configuring [27-17, 27-19](#)
 - deleting [27-19](#)
 - explained [27-9](#)
 - finding [27-18](#)
- call park example [27-5](#)
- characteristics [27-3](#)
- Cisco Unified Communications Manager Attendant Console usage [11-15](#)
- configuration checklist (table) [27-15](#)
- creating audio sources [27-9](#)
- database scalability [27-7](#)
- default MOH sample [27-9](#)
- definitions [27-2](#)
- described [27-1](#)
- failover and fallback [27-14](#)
- features
 - manageability [27-7](#)
 - server manageability [27-6](#)
 - server redundancy [27-6](#)
 - server scalability [27-6](#)
- fixed audio source
 - configuration settings (table) [27-23](#)
 - configuring [27-23](#)
 - deleting [27-23](#)
 - described [27-22](#)
- functionality [27-4](#)
- list of topics [27-1](#)
- managing audio sources [27-10](#)
- monitoring performance
 - overview (table) [27-16](#)
 - service states [27-17](#)
- requirements and limits [27-12](#)
- server configuration settings (table) [27-26](#)
- servers
 - characteristics [27-5](#)
 - configuring [27-24, 27-25](#)

- database requirements [27-7](#)
- explained [27-8](#)
- finding [27-24](#)
- manageability [27-6](#)
- perfmon counters [27-16](#)
- redundancy [27-6](#)
- resetting [27-26](#)
- scalability [27-6](#)
- storing audio sources [27-10](#)
- supported features [27-5](#)
- transfer hold example [27-5](#)
- understanding [27-1](#)
- user hold example [27-5](#)

N

- nonpreemptable user access channel [26-14](#)
- notification tones for monitoring and recording [25-20](#)
- numbering plan
 - MLPP (figure) [26-23](#)
 - MLPP access control [26-22](#)

O

- other group pickup
 - configuration checklist (table) [5-16](#)
 - described [5-3](#)

P

- parameters, service
 - CDR [24-5](#)
- partitions
 - restricting access [5-10](#)
 - using call pickup [5-10](#)
 - Web Dialer support [14-9](#)
- PCM file requirements for custom ring types [16-3](#)

- perfmon counters
 - counter descriptions (table) [27-16](#)
 - using to view MOH servers [27-16](#)

- phones
 - and call display restrictions [3-8](#)
 - custom rings
 - creating [16-1, 16-3](#)
 - overview [16-1](#)
 - PCM file requirements [16-3](#)
 - interaction with Presence [28-3](#)

- pilot points
 - associating with the ac user [11-26](#)
 - configuration settings (table) [11-29](#)
 - configuring [11-28](#)
 - deleting [11-30](#)
 - finding [11-27](#)
 - resetting [11-31](#)
 - understanding [11-3](#)

- precedence
 - alternate party diversion (APD)
 - example (figure) [26-12](#)
 - explained [26-11](#)
 - blocked [26-21](#)
 - blocked (figure) [26-21](#)
 - busy station [26-21](#)
 - call setup [26-10](#)
 - CDR recording [26-27](#)
 - explained [26-3](#)
 - patterns
 - access control [26-22](#)
 - MLPP (figure) [26-23](#)
 - setup [26-9](#)
 - unauthorized [26-20](#)
 - unauthorized (figure) [26-20](#)
- preemption
 - common network facility [26-15](#)
 - common network facility example (figure) [26-16](#)
 - common network facility example with retry timer Trr (figure) [26-17](#)

- details [26-13](#)
- enabled [26-12, 26-13](#)
- explained [26-6](#)
- receiving [26-12](#)
- user access [26-13](#)
- user access channel nonpreemptable [26-14](#)
- user access example (figure) [26-14](#)

Presence

- authorization [28-7](#)
- BLF/SpeedDial
 - buttons, configuring [28-20](#)
 - configuration settings (table) [4-23, 28-21](#)
 - configuring [28-19](#)
- configuration checklist (table) [28-11](#)
- feature interactions and restrictions [28-10](#)
- groups
 - applying [28-17](#)
 - configuration example [28-6](#)
 - configuration settings (table) [28-16](#)
 - explained [28-5](#)
 - interaction examples [28-7](#)
- interaction with Cisco Extension Mobility [28-9](#)
- interaction with phones and trunks [28-3](#)
- interaction with route lists [28-4](#)
- more information [28-22](#)
- overview [28-1](#)
- request examples [28-3](#)
- SUBSCRIBE calling search space [28-9, 28-13](#)
- tips for presence group and presence authorization [28-18](#)

PRI and MLPP [26-29](#)

privacy

- activating [1-10](#)
- configuration checklist (table) [1-12](#)
- configuring [1-11](#)
- described [1-5](#)
- installing and activating [1-10](#)
- interactions and restrictions [1-7](#)
- overview [1-1](#)

- related topics [1-14](#)
- service parameters [1-13](#)
- system requirements [1-6](#)

privacy on hold

- activating [1-11](#)
- configuration checklist (table) [1-12](#)
- configuring [1-11](#)
- described [1-6](#)
- installing and activating [1-10](#)
- interactions and restrictions [1-7](#)
- related topics [1-14](#)
- service parameters [1-13](#)
- system requirements [1-6](#)

proxy user, creating for Web Dialer [14-11](#)

Q

QRT

- activating [29-14](#)
- activating CEF service [29-22](#)
- adding softkey template to phones [29-20](#)
- alarms and traces [29-22](#)
- architecture overview [29-3](#)
- can't make calls (figure) [29-13](#)
- can't make calls (table) [29-13](#)
- Cisco Extended Functions service [29-5](#)
- components [29-2](#)
- configuration checklist (table) [29-16](#)
- configuring [29-15](#)
- configuring softkey template in common device configuration [29-19](#)
- creating softkey template [29-17](#)
- description [29-1](#)
- extended menu choices [29-9](#)
- information to users [29-30](#)
- installing [29-14](#)
- interactions [29-14](#)
- IP phone support [29-5](#)
- overview [29-1](#)

- phone configuration (figure) [29-21](#)
 - phone interface (figure) [29-10](#)
 - phone interface display (figure) [29-9](#)
 - phone recently rebooted (table) [29-12](#)
 - problem categories (table) [29-10](#)
 - problems with last call (table) [29-12](#)
 - problem with phone that recently rebooted (figure) [29-13](#)
 - QRT Viewer [29-25](#)
 - reason codes (table) [29-10](#)
 - related topics [29-32](#)
 - reporting problem with current call (figure) [29-11](#)
 - reporting problem with last call (figure) [29-12](#)
 - reports
 - described [29-26](#)
 - fields by supported category [29-28](#)
 - restrictions [29-14](#)
 - securing signaling connections [29-7](#)
 - serviceability features [29-21](#)
 - setting service parameters [29-24](#)
 - softkey [29-17](#)
 - softkey layout configuration (figure) [29-19](#)
 - softkey template configuration window (figure) [29-17](#)
 - softkey template configuration window after copy (figure) [29-18](#)
 - system requirements [29-5](#)
 - troubleshooting [29-30](#)
 - user interface [29-8](#)
 - using [29-8](#)
 - voice quality feedback (figure) [29-9](#)
- Quality Report Tool (QRT)
- See* QRT
-
- ## R
- recording
 - adding user for application (figure) [25-28](#)
 - adding user to groups (figure) [25-29](#)
 - agent conference (figure) [25-18](#)
 - application-invoked [25-14](#)
 - application-invoked (figure) [25-15](#)
 - architecture (figure) [25-4](#)
 - automatic [25-14](#)
 - automatic (figure) [25-15](#)
 - barged call (figure) [25-17](#)
 - BIB [25-23](#)
 - call characteristics [25-20](#)
 - call display [25-23](#)
 - call information [25-23](#)
 - call preservation [25-23](#)
 - calls do not survive agent hold (figure) [25-16](#)
 - codec for calls (figure) [25-21](#)
 - configuration checklist (figure) [25-37](#)
 - configuring [25-27](#)
 - configuring calling search spaces (figure) [25-31](#)
 - configuring tones (figure) [25-30](#)
 - creating a route pattern for the recorder (figure) [25-35](#)
 - creating recorder redundancy (figure) [25-36](#)
 - creating SIP trunk that points to the recorder (figure) [25-34](#)
 - CTI event delivery (figure) [25-24](#)
 - CTI requirements [25-24](#)
 - described [25-1](#)
 - enabling for a line appearance (figure) [25-32](#)
 - firewalls (figure) [25-23](#)
 - hardware requirements [25-25](#)
 - interactions listed [25-25, 25-26](#)
 - interactions with CTI and JTAPI/TSP applications [25-25](#)
 - interactions with other features [25-26](#)
 - introducing [25-1, 25-13](#)
 - limiting codec usage [25-22](#)
 - modes [25-14](#)
 - notification tones [25-20](#)
 - one-way media [25-22](#)
 - one-way media (figure) [25-23](#)
 - overview (figure) [25-3](#)

- play tone behavior [25-21](#)
- profiles
 - creating (figure) [25-33](#)
- recorder as SIP trunk device [25-14](#)
- related topics [25-38](#)
- restrictions
 - security [25-26](#)
 - with intercom [25-26](#)
- service parameters [25-38](#)
- simultaneous with monitoring (figure) [25-19](#)
- streaming through the agent IP phone (figure) [25-5](#)
- supported devices [25-5](#)
- system requirements [25-24](#)
- terminology [25-2](#)
- turn on IP phone BIB to allow (figure) [25-27](#)
- Redirector servlet
 - configuring [14-10](#)
- redundancy
 - Cisco Unified Communications Manager Attendant Console [11-12](#)
 - creating for recorders (figure) [25-36](#)
 - MOH servers [27-6](#)
 - Web Dialer [14-2](#)
- remote destination profiles
 - associating a directory number [13-31](#)
 - configuration [13-29](#)
 - configuration settings (table) [13-32](#)
 - configuring [13-31](#)
 - deleting [13-31](#)
 - finding [13-29](#)
- remote destinations
 - configuration settings (table) [13-38](#)
 - configuring [13-35, 13-36](#)
 - deleting [13-37](#)
 - finding [13-35](#)
- requirements
 - Call Back [2-5](#)
 - Cisco Extension Mobility [8-8](#)
 - Cisco Unified Mobility [13-21](#)
 - device mobility [17-6](#)
 - hold reversion [20-6](#)
 - retry timer Trr example (figure) [26-17](#)
 - reverse callback
 - dial-via-office with Cisco Unified Mobility [13-9](#)
 - reverted calls [20-4](#)
 - Ringlist.xml file format [16-2](#)
 - route groups
 - binding to a local route group [23-3](#)
 - local
 - and called party transformations [23-9](#)
 - and forwarding [23-12](#)
 - and route plan report [23-12](#)
 - and supplementary services [23-12](#)
 - binding a provisioned route group [23-3](#)
 - called digits transformation (figure) [23-10](#)
 - described [23-2](#)
 - installing and activating [23-13](#)
 - interactions [23-11](#)
 - introduction [23-1](#)
 - mixed route list restrictions [23-13](#)
 - provisioning local offnet access with (figure) [23-6](#)
 - provisioning local offnet access without (figure) [23-5](#)
 - provisioning TEHO with (figure) [23-9](#)
 - provisioning TEHO without (figure) [23-8](#)
 - restrictions [23-13](#)
 - routing with [23-3](#)
 - supported devices [23-11](#)
 - system requirements [23-11](#)
 - route lists
 - interaction with Presence [28-4](#)
 - route patterns
 - creating for the recorder (figure) [25-35](#)
 - route plan report
 - and local route groups [23-12](#)
 - routing
 - simple with local route groups [23-4](#)

S

SCCP

status notification for DND [18-2](#)

security

Cisco Unified Communications Manager Assistant [9-26, 10-18](#)

IPMASecureSysUser [9-26, 10-18](#)

Presence authorization [28-7](#)

with monitoring feature [25-26](#)

with recording feature [25-26](#)

service parameters

barge [1-13](#)

CDR [24-5](#)

external call transfer restrictions [19-6](#)

for call pickup [5-21](#)

for Cisco Extension Mobility (table) [8-18](#)

for monitoring and recording [25-38](#)

for recording and monitoring (figure) [25-31](#)

MLPP [26-27](#)

mobile voice access, configuring by [13-47](#)

Presence [28-13](#)

privacy [1-13](#)

privacy on hold [1-13](#)

Web Dialer [14-6](#)

services

adding the Cisco Extension Mobility service [8-17](#)

supplementary for MLPP [26-30](#)

shared conference bridges and cBarge [1-10](#)

shared lines

MLPP interaction [26-28](#)

SIP

DND status notification [18-2](#)

recorder as SIP trunk device [25-14](#)

support for Cisco Extension Mobility [8-4](#)

trunks

creating to point to the recorder (figure) [25-34](#)

URI dialing with Cisco Unified Mobility [13-14](#)

softkeys

barge [1-4](#)

cBarge [1-5](#)

configuring mobility [13-48](#)

templates for MCID [24-6](#)

SRST

intercom usage [22-5](#)

supplementary services

call forwarding [26-31](#)

call pickup [26-33](#)

call transfer [26-32](#)

hunt pilots and hunt lists [26-33](#)

multiple appearance lines [26-30](#)

overview [26-30](#)

three-way calling [26-32](#)

system requirements

call pickup [5-11](#)

T

tail end hop off (TEHO)

and local route groups [23-7](#)

TEHO

and local route groups [23-7](#)

templates, softkey

MCID [24-6](#)

time-of-day access

with Cisco Unified Mobility

configuration checklist (table) [13-11](#)

described [13-10](#)

important notes [13-12](#)

TLS, securing connection to CTI [29-7](#)

trace settings, Web Dialer [14-12](#)

transfer

external call transfer restrictions [19-1](#)

transfer hold, example with MOH [27-5](#)

transformations

called party with local route groups [23-9](#)

translation patterns

- for call display restrictions [3-6](#)

Trr retry timer preemption example (figure) [26-17](#)

trunks

- interaction with Presence [28-3](#)

- selection for MLPP

- example (figure) [26-25](#)

- explained [26-24](#)

U

unicast

- audio sources for MOH [27-10](#)

- explained [27-10](#)

URI

- dialing with Cisco Unified Mobility [13-14](#)

user hold, example with MOH [27-5](#)

users

- Cisco Unified Communications Manager Attendant Console

- configuring [11-21](#)

- understanding [11-2](#)

V

voice mail

- interaction with call display restrictions [3-5](#)

W

Web Dialer

- activating [14-4](#)

- adding users to standard Cisco Unified Communications Manager end users group [14-10](#)

- configuration checklist (table) [14-5](#)

- configuring [14-5](#)

- configuring application dial rules [14-10](#)

- configuring for local language [14-8](#)

- configuring Redirector servlet [14-10](#)

- creating a proxy user [14-11](#)

- installing [14-4](#)

- interactions [14-3](#)

- interactions and restrictions [14-3](#)

- introducing [14-1](#)

- locale settings in Microsoft Internet Explorer (figure) [14-9](#)

- overview [14-1](#)

- partition support [14-9](#)

- redundancy [14-2](#)

- related topics [14-13](#)

- restrictions [14-4](#)

- secure TLS connection [14-8](#)

- service parameters [14-6](#)

servlet

- Redirector [14-2](#)

- Webdialer [14-1, 14-6](#)

- system requirements [14-3](#)

- trace settings [14-12](#)